TAXiTRONiC IR32

USER´S MANUAL
IR32 PRINTER

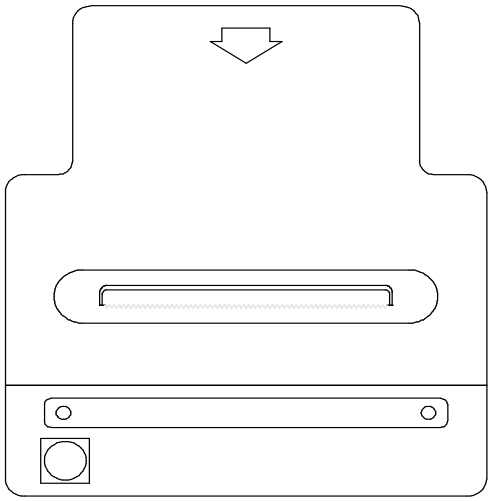

INDEX

1.TX30 + IR30T

1.1. SERVICE TICKET
1.2. DIRECT DISPLAY TOTALIZERS
1.3. TOTALIZERS DISPLAYED UNDER PASSWORD
1.4. PARAMETERS DISPLAYED UNDER PASSWORD
1.5. PAPER FEED
1.6. PRINTER TEST

2.TX30-MT + IR30T

2.1. SERVICE TICKET
2.2. ACCUMULATIVE TOTALIZERS

3.ACCESSORIES

3.1. INSTRUCTIONS TO CHANGE THE PAPER ROLL

1. TX30 + IR32

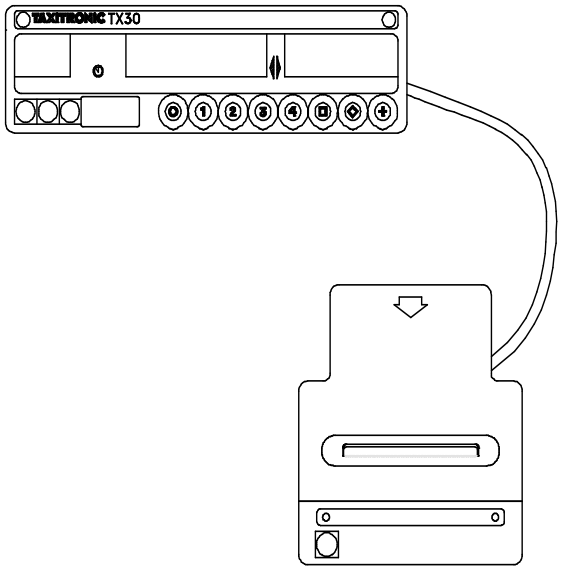

1.1. SERVICE TICKET

There are two possibilities:

A. When the service ticket printing is OBLIGATORY:

A.1. SERVICE TICKET

- It is printed automatically at the end of the service.

A.2. COPIES OF THE SERVICE TICKET

- To print a copy, press "+" push-button during the passage from TO PAY to FREE status.

B. When the service ticket printing is OPTIONAL:

B.1. SERVICE TICKET

- It is printed pressing push-button "+" during the passage from TO PAY to FREE.

B.2. COPIES OF THE SERVICE TICKET

- To print a copy, press "+" push-button during the passage from TO PAY to FREE.

- They can also be printed pressing "+" during the visualization of the last service data (only when this possibility has been programmed in the taximeter).

1.2. DIRECT DISPLAY TOTALIZERS

The totalizers that are displayed pressing push-button "◆" of the taximeter in FREE status, can be printed pressing push-button "+" during their visualization.

1.3. TOTALIZERS DISPLAYED UNDER PASSWORD (When programmed)

The accumulative totalizers displayed under Password are automatically printed when the corresponding access code is pressed in the taximeter.

1.4. PARAMETERS DISPLAYED UNDER PASSWORD (When programmed)

The taximeter and tariff parameters that are displayed in the taximeter are printed pressing “+” push-button during their visualization.

1.5. PAPER FEED

Press “+” push-button when the calendar clock is being displayed.

1.6. PRINTER TEST

Press “+” push-button during the displays test sequence of the taximeter.

2. TX30-MT + IR32

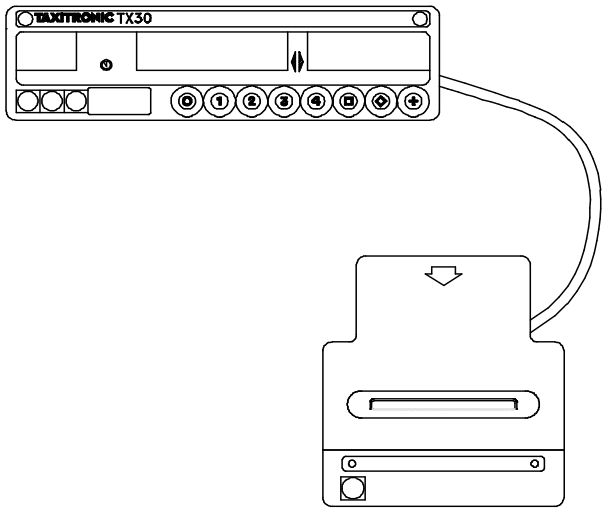

2.1. SERVICE TICKET

It is automatically printed at the end of the service.

2.2. ACCUMULATIVE TOTALIZERS

Being the taximeter in FREE status, press “+” push-button and simultaneously “O” push-button.

3. ACCESSORIES

3.1. INSTRUCTIONS TO CHANGE THE PAPER ROLL

1 - SEPARATE A LITTLE THE HOLDERS AND PUT THE PRINTER ROLL.

2 - LIFT THE PRINTER COVER

3 - PUT THE PAPER THROUG THE PRINTER

4 - CLOSE AGAIN THE PRINTER